



# Disassembling JVC GR-D290U

Written By: justin chen





## TOOLS:


- [Phillips #1 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — Top Cover & LCD Screen



- Open the LCD screen and remove 2 hinge screws.
- Remove hinge cover. Shut screen when finished.

## Step 2

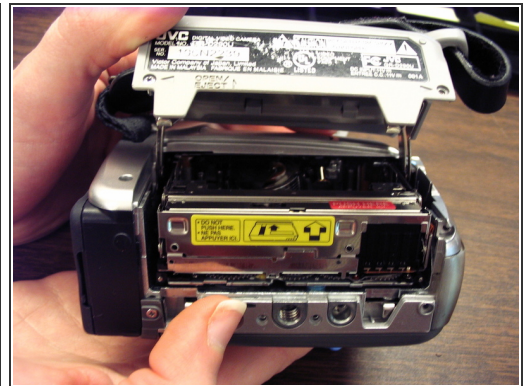

- Remove 5 screws on bottom panel of camera.
- Push the eject button on the bottom panel to open the cassette cover.
- Shut cassette cover when finished.



## Step 3



- Open LCD screen and move dark gray tab near eyepiece aside.
- Remove screw under dark gray tab on LCD screen side of camera.

## Step 4



- Remove 2 screws on side opposite LCD screen.

## Step 5



- Place plastic opening tool under seam of camera top cover and unsnap cover.
- Gently pry top cover from camera base.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-18 01:39:43 PM.